

# Reach City(Trail)

Accessories Assembly Owner manual

Front/rear mudguards

Front/rear carriers

Kickstand



# Mudguard Assembly Procedures

## Step 1:

Remove the rear and front mudguards and parts from the packing.



Assemble the mudguard sub-assembly first

## Step 2: (rear mudguard)

For installation position the bicycle upside down, release the QR lever of the rear wheel. Move or remove the rear wheel. Use a 3mm allen key lock the mudguard stopper with 1mm play. Install the rear wheel and secure the QR lever.




### Step 3: (rear mudguard continued)

Place the bicycle back on its wheel. Fix the front end of mudguard first. Insert the zip ties into the plastic adaptor, then use a 4mm allen key to fix the adaptor in position. Cut the extra length of zip ties close to the plastic adaptor. Lock the mudguard stay. Repeat the other side. Use 10mm wrench to adjust the clearance.



## Step 4: (front mudguard)

Use a 4mm allen key to assemble the plastic adaptor below the V-brake. Repeat for the other side. Clamp the mudguard stay. Use 10mm wrench to adjust the clearance. Cut the extra length of zip ties if necessary.

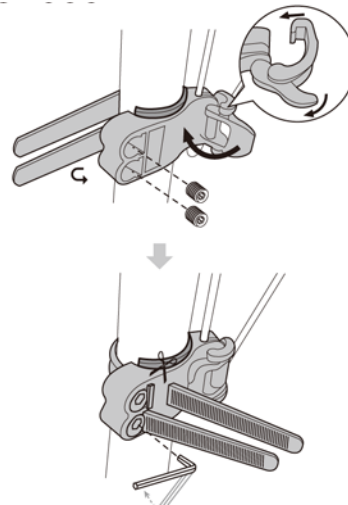

## Carrier Assembly Procedures

### Step 1: (front carrier)

Use a 3mm allen key to tighten the center stay of the carrier to the upper part of the fork, use a 5mm allen key fix the carrier stay to both sides.

Note: put spacer in between the stay and fork before tightening all bolts.



Note: Do not put over 25kg of luggage on the carriers.

## Step 2: (rear carrier)

The rear carrier includes carrier body, 1 long M5 bolt and 1 shorter M5 bolt, and 4 Igus self-lubricating plastic bushings.

Use the bolt to push all the 4 Igus into the 4 holes on the back of the seat tube. Use 5mm allen key to tighten the carrier with short bolt on top and long bolt at bottom.



Note: Do not put over 25kg of luggage on the carriers.

## Kickstand Assembly Procedures

Use the 8mm allen key to tighten the kickstand, adjust the angle to prevent interference with crank.

